


het klavier : Flown Plot Heads

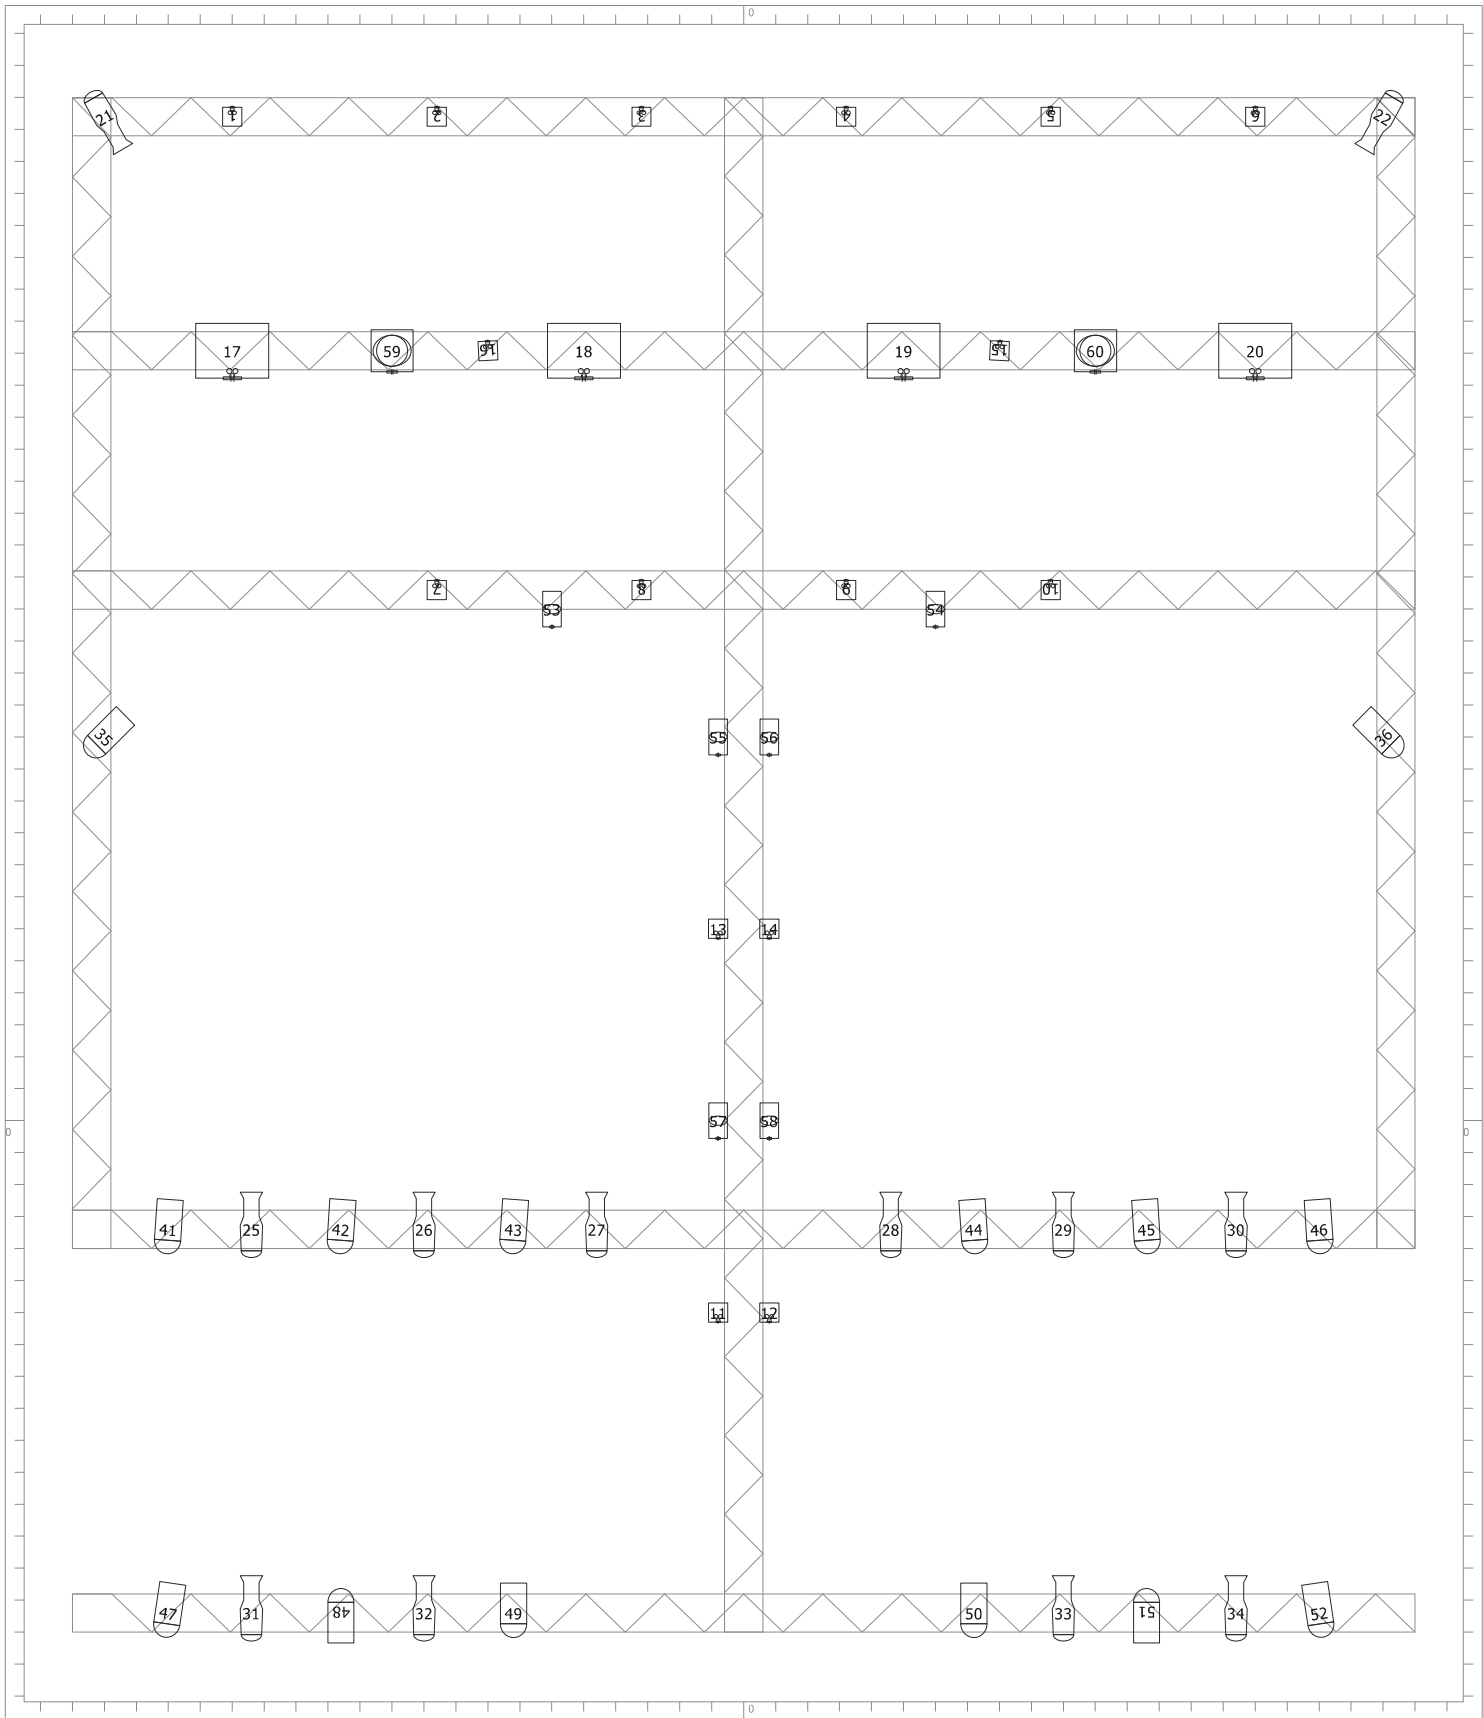

het klavier : Fixture Patch

Head No	DMX	Position	Hang	Manufacturer	Model	Mode
1	01-001	STAGE UP		Showtec	Spectral1500ZT	Tour
2	01-013	STAGE UP		Showtec	Spectral1500ZT	Tour
3	01-025	STAGE UP		Showtec	Spectral1500ZT	Tour
4	01-037	STAGE UP		Showtec	Spectral1500ZT	Tour
5	01-049	STAGE UP		Showtec	Spectral1500ZT	Tour
6	01-061	STAGE UP		Showtec	Spectral1500ZT	Tour
7	01-073	STAGE DOWN		Showtec	Spectral1500ZT	Tour
8	01-085	STAGE DOWN		Showtec	Spectral1500ZT	Tour
9	01-097	STAGE DOWN		Showtec	Spectral1500ZT	Tour
10	01-109	STAGE DOWN		Showtec	Spectral1500ZT	Tour
11	01-121	CENTRE APRON		Showtec	Spectral1500ZT	Tour
12	01-133	CENTRE APRON		Showtec	Spectral1500ZT	Tour
13	01-145	CENTRE APRON		Showtec	Spectral1500ZT	Tour
14	01-157	CENTRE APRON		Showtec	Spectral1500ZT	Tour
15	01-169	STAGE CENTRE		Showtec	Spectral1500ZT	Tour
16	01-181	STAGE CENTRE		Showtec	Spectral1500ZT	Tour
17	01-301	STAGE CENTRE		Spotlight	CycLed300	RGBW
18	01-308	STAGE CENTRE		Spotlight	CycLed300	RGBW
19	01-315	STAGE CENTRE		Spotlight	CycLed300	RGBW
20	01-322	STAGE CENTRE		Spotlight	CycLed300	RGBW
53	01-350	STAGE DOWN		Equinox	Fusion120Zoom	16ch
54	01-366	STAGE DOWN		Equinox	Fusion120Zoom	16ch
55	01-382	CENTRE APRON		Equinox	Fusion120Zoom	16ch
56	01-398	CENTRE APRON		Equinox	Fusion120Zoom	16ch
57	01-414	CENTRE APRON		Equinox	Fusion120Zoom	16ch
58	01-430	CENTRE APRON		Equinox	Fusion120Zoom	16ch
59	01-219	STAGE CENTRE		Chauvet	IntSpot375ZIRC	15ch
60	01-234	STAGE CENTRE		Chauvet	IntSpot375ZIRC	15ch
105	02-500			Generic	Haze	1ch

het klavier : Fixture Patch

Head No	Head Name	Beam Angle	Gel	Position	Hang	DMX	DMX	DMX	DMX	DMX	DMX
21	profiled 200			STAGE UP		01-285					
22	profiled 200			STAGE UP		01-286					
23	profiled 200					01-287					
24	profiled 200					01-288					
25	profiled 200			FRONT 1		01-289					
26	profiled 200			FRONT 1		01-290					
27	profiled 200			FRONT 1		01-291					
28	profiled 200			FRONT 1		01-292					
29	profiled 200			FRONT 1		01-293					
30	profiled 200			FRONT 1		01-294					
31	profiled 200			FRONT 2		01-295					
32	profiled 200			FRONT 2		01-296					
33	profiled 200			FRONT 2		01-297					
34	profiled 200			FRONT 2		01-298					
35	profiled 200 ww		L151	STAGE RIGHT		01-201					
36	profiled 200 ww		L151	STAGE LEFT		01-202					
37	profiled 200 ww		L151			01-203					
38	profiled 200 ww		L151			01-204					
39	profiled 200 ww		L151			01-205					
40	profiled 200 ww		L151			01-206					
41	profiled 200 ww		L151	FRONT 1		01-207					
42	profiled 200 ww		L151	FRONT 1		01-208					
43	profiled 200 ww		L151	FRONT 1		01-209					
44	profiled 200 ww		L151	FRONT 1		01-210					
45	profiled 200 ww		L151	FRONT 1		01-211					
46	profiled 200 ww		L151	FRONT 1		01-212					
47	profiled 200 ww		L151	FRONT 2		01-213					
48	PC BAR			FRONT 2		01-214					
49	profiled 200 ww		L151	FRONT 2		01-215					
50	profiled 200 ww		L151	FRONT 2		01-216					
51	PC BAR			FRONT 2		01-217					
52	profiled 200 ww		L151	FRONT 2		01-218					
100	relait speelva			PATCHKAST		02-001					
101	relait zaal			PATCHKAST		02-002					
102	dimmer speelva			PATCHKAST		02-003					
103	dimmer zaal			PATCHKAST		02-004					
104	dimmer wand			PATCHKAST		02-005					